



NOTES:

1. WHEN "ON-AUTO" LITE IS ON, THE GENSET CONTROL PROTECTS AGAINST ABNORMAL WATER TEMPERATURE, OIL PRESSURE, OVERSPEED, AND OVERCRANKING.

WHEN "ON-AUTO" LITE IS OFF, (i.e. SWITCH IN MANUAL POSITION, AGC1 FUSE BLOWN, ETC.) NO PROTECTION OF THE ENGINE IS POSSIBLE.

SWITCH MUST BE MOMENTARILY PLACED IN THE "MANUAL" POSITION TO RESET A FAULT SHUTDOWN.

* RELAYS AR, FS, & CS ARE INSIDE THE GENSET CONTROL.

FREQUENCY SENSING FROM ALTERNATOR TACH. TERMINAL

Bouchette Electronics, Inc. N11325 County Highway Y Clintonville, WI 54929				
TITLE CONNECTION DIAGRAM A121M6/A241M6 CONTROL				
DATE	DWN BY	CHK	SCALE	
07/13/93	DSB	TJB	NONE	
P/N	CAD REF	DWG NO		
	PCB111	E114-17		